

# Manual Futuro Wallbox



timberlab

natural outdoor solutions

[www.timberlab.eu](http://www.timberlab.eu)

Timberlab B.V.  
Harskamperweg 32  
6731 AB Otterlo

## Follow this installation guide for a safe installation.

### General

- Follow this installation guide for a safe installation.
- Installation and connection of the lighting armature should be done by a certified installer
- Disable main supply before starting installation activities!
- Timberlab is not responsible for adjustments or modifications on the armature
- The armature is not dimmable!
- The earthing will be (is) connected to the RVS lid
- We do not recommend the use of concrete mortar for filling in the area around the column. If necessary/derivable, depending on the type of soil a stabilising sand can be applied.

### Maintenance advice

The wood does not require any maintenance. In the course of time, the wood will grey in a natural way. If a treatment is chosen, a moisture regulating surface treatment should always be applied. Ask your supplier for advice! If desired, the LED module can be cleaned with a soft brush.

### Warranty

The product comes with a two-year guarantee. Wood is a natural product. This wood is, unless expressly stated otherwise, fresh, undried, sawn and/or planed (if applicable). No further woodworking was performed. There is always a chance of warping and/or (dry) cracking of the wood. This may occur upon delivery or later. This is not a production error but a natural characteristic of the wood. Warranties do not apply for this.

Product	Wood species	Certification	In ground/ post holder	Colour temperature	Version	Voltage	Variations
				K		VAC	
Futuro Wallbox (78)	Oak (3)	N/A (0)	L1+600mm (00)	N/A (0)	32mm hole (0)	230V (1)	N/A (00)
		PEFC (2)					

The product code is generated by selecting the options and taking the number in brackets ().



21-03-2022






# Futuro wallbox excl cable


## 1. Screw

Unscrew the stainless steel lid

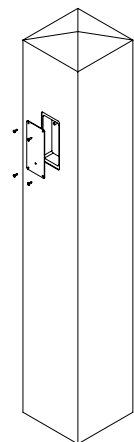


## 2. Detach

Remove the nut. You can now pull the wallbox out of the post at the front

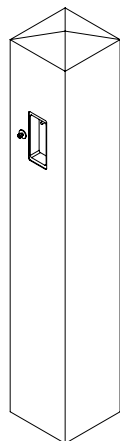

## 3. Connect

Connect the wallbox. Follow the wallbox manual when doing this.

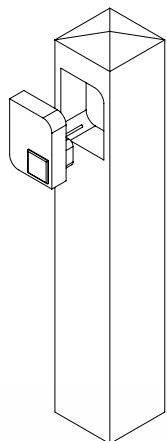


## 4. Mount

Place the wallbox back in. Tighten the nut and screw the lid back on.




## 5. Drilling

Drill or dig holes in the ground.

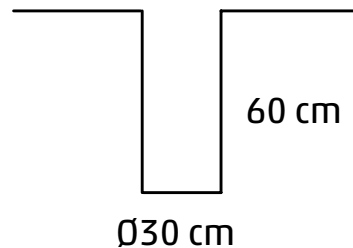

## 6. Place

Place the Futuro in the hole.

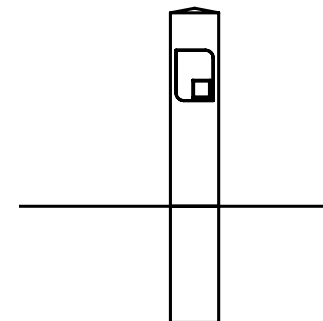

CE

21-03-2022